

Free Flight Airplane Instructions

Installing the “AA” batteries in the charger.

1. Open the battery compartment cover by removing the cover
2. Install two new “AA” alkaline batteries paying close attention to the polarities +/- inside the compartment.
3. Replace the cover.

Charging your Airplane for flight.

NOTE: *Keep your hands and all other objects away from the propeller when charging and launching your Free Flight Airplane.*

1. Make sure the power switch on the bottom of the airplane is in the “OFF” position.
2. Insert the white charge jack into the charging port on the plane. The jack inserts properly only one way. It should insert very easily, without added force.
3. Allow the plane’s battery to charge for 5 – 10 seconds. Then, remove the charger.

Launch your Free Flight Airplane.

1. With your fingers away from the propeller, turn the power switch to the “ON” position and launch your free flight airplane.
2. Hold your plane by the fuselage with its spinning propeller pointing away from you.
3. Gently toss it into the air at a slight upward angle – and watch it fly!

Battery Safety Information

- Batteries should always be replaced by an adult.
- Do not mix old and new batteries.
- Do not mix different types of batteries – such as alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Use only the recommended battery type. ie. “AA” Alkaline.
- Install batteries paying close attention to the polarities +/- inside the compartment.
- Exhausted batteries should be removed from the toy.
- Do not short-circuit the supply terminals.
- Save these warnings for future reference.

Caution: Do not expose batteries to fire as they may leak or explode.